



**▲BUSH**

ANTIQUE RADIO  
TR130



# Getting started

Thank you for purchasing your new Bush product.

Remove your Bush TR130 carefully from the box. You may wish to store the packaging for future use.

Read these instructions before use.

## Switching on

### Mains power

Insert the mains power cord into the socket on the rear of the unit.  
Connect the 3-pin mains plug into the mains socket and switch on.

### Please Note

When not in use, disconnect the 3-pin plug from the mains power and the power cord from the unit.

### Batteries

To use battery power, ensure the mains lead is removed from the AC socket. Remove the battery compartment cover.  
Fit 6 x C size battery (not supplied) into the compartment.  
Refit the battery compartment cover.

## Adjusting the sound

Rotate the **Volume control** to set the sound level.

The **Tone control** can be adjusted to your personal preference.

## Headphones

Plug your headphones into the **Headphones** socket on the side of the unit.

Headphones should have a 3.5mm diameter stereo plug and a impedance of 8-32 ohms.

When headphones are connected, the speakers are automatically disconnected.

# Using the radio

## Tuning

Rotate the **Volume control** to turn the unit on.

Select the desired frequency band (FM, MW and LW) using the **Band selector** buttons.

Tune to the desired radio station by turning the **Tuning control** until the white line coincides with the correct frequency on the scale.

## To turn the radio off

Rotate the **Volume control** towards the off position until it clicks.

## Aerial

For reception the signals are picked up through the built-in antenna. You may have to move the radio to obtain the best reception.



# Safety instructions

**1** Read all the safety instructions before first use of your TR130

## Power source

You should only plug the appliance into a 230V to 240V AC, 50Hz supply.

## Safety considerations

- Position the power supply lead and other leads so that they are not likely to be walked on or pinched by objects placed on or against them.
- Do not use the appliance in humid or damp conditions. Do not allow the appliance to get wet, ie. dripping or splashing, as this may be dangerous.

## Cleaning

- Unplug your portable radio before you clean it.
- Do not use liquid or aerosol cleaners.
- Clean your portable radio with a soft, damp (not wet) cloth.

## Ventilation

- The slots and openings on the portable radio are for ventilation. Do not cover or block them as it could lead to overheating.
- NEVER let children push anything into the holes or slots on the case.

## Servicing

- There are no user serviceable parts in your radio.
- When servicing, refer to qualified service personnel.
- Consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

## Battery disposal

Please ensure batteries are disposed of safely.

## Electrical information

Make sure that the voltage of your electricity supply is the same as that indicated on the rating plate.

# Guarantee

This product is guaranteed for twelve months from the date of original purchase. If any defect arises due to faulty materials or workmanship, the unit will either be replaced, a refund given or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee is only valid within the boundaries of the country of purchase.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purposes.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexperienced repair.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The guarantee is in addition to, and does not diminish, your statutory or legal rights.

Bush Australia  
PO BOX 6287  
Silverwater NSW 1811  
[WWW.bushaustralia.com.au](http://WWW.bushaustralia.com.au)



# Technical Specifications

## Technical specifications

### Power Supply

AC: ..... 230-240V ~ 50 Hz

Batteries: ..... 6 x C size battery

### Radio Frequency Coverage

FM: ..... 88 - 108 MHz

MW: ..... 530 - 1600 kHz

LW: ..... 150 - 285 kHz

### General

Headphones: ..... 3.5mm stereo jack plug, 8-32 Ohms

## Acknowledgements

Bush would like to thanks the following people for their help in the production of this reproduction radio.

Bob Thompson

Andy Ng

Ricky Y.C. Ku

# Quick view

